

DS1 Wireless Keypad



Using your own PIN code, the keypad can open a gate in 3 different actions, or open up to 3 different devices- such as Gates and Garage Doors.

PIN access allows you to open the gate without a remote control.

Unit can be quickly and easily installed, even after the automation has been fitted.

Easy instructions for Memorization (or programming) the Mhouse Keypad (DS1) (MODE 1)

Remove grey cover to motor, using a screw driver. On the motor circuit board, find the 3 vertical finger-press buttons. The top one is P1. Press and hold P1 button for three seconds until the light to the left of P1 goes RED, then let go.


- Then within 10 seconds, press 1-1 and hold down the orange button on the keypad for approximately three seconds until the red light at the left of P1 flashes slowly 3 times, then let go. The red light will stay on for a few seconds.

If the P1 red light flashed 3 times, the keypad has been memorized.

Do not press any buttons for at least 10 seconds, then try the keypad.

11A – opens and closes gate

11B – pedestrian mode (opens gate 1 metre)

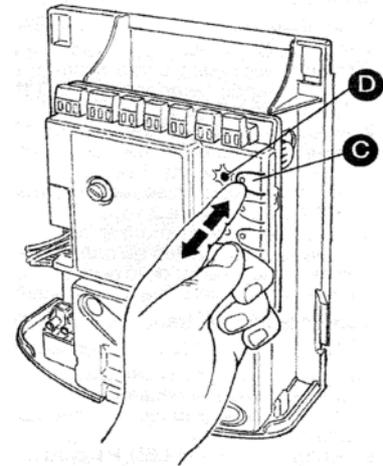

Help Line: Phone 1800 241 733

CHANGE THE CODE

1. Press orange button followed by factory default PIN 1 - 1
2. Press orange button, enter new PIN (up to 10 digits) then press the orange button to confirm
3. Re-enter new code and press orange button to confirm. 3 beeps = successful. 5 beeps = unsuccessful.

Keep your PUK code (on front page of instructions) to reset the PIN in the future.