

GTX4 remote for MHOUSE automation products



One remote can operate up to four MHOUSE compatible devices- Gates, Garage Doors, Security Alarms, Awnings.

Easy instructions for Memorization (or programming) the Mhouse Remote (GTX4) (MODE 1)

Remove grey cover to motor, using a screw driver. On the motor circuit board, find the 3 vertical finger-press buttons. The top one is P1. Press and hold P1 button for three seconds until the light to the left of P1 goes RED, then let go.

- Then within 10 seconds, press and hold any button on the remote for approximately three seconds until the red light at the left of P1 flashes slowly 3 times, then let go. The red light will stay on for a few seconds.

If the P1 red light flashed 3 times, the remote has been memorized.

Do not press any buttons for at least 10 seconds, then try the remote.


Btn 1 - open, stop, close, open

Btn 2 - pedestrian (opens 1 metre)

Btn 3 - open only

Btn 4 - close only

Note: The remote slides out of the wall mount clip. Or attach remote to key-ring.

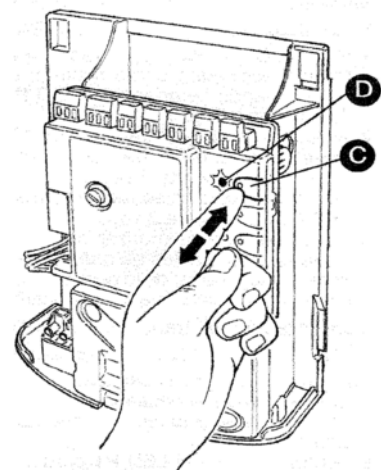

Help Line: Phone 1800 241 733

It is possible to memorize a new GTX4 without opening the cover and pressing P1. But this is provided you have an "OLD" pre-memorized operational remote control (GTX4). The NEW remote to be memorized will inherit the characteristics of the OLD one, i.e. if the OLD remote was memorized in "mode 1", the NEW one will be the same. (see the manufacturer's instruction sheet for full details).

Holding the 2 remotes, position yourself near the control unit or receiver.

1. Press the button on the NEW remote & hold it down for a least 5 seconds, then release it.
2. Press the button on the OLD remote 3 times slowly.
3. Press the button on the NEW remote once slowly.

At this point the NEW remote will be recognized by the control unit (gate motor). For other remotes, repeat the above. For mode 1, watch this youtube.

<http://www.youtube.com/watch?v=TKTQ2eHix0M>